




## Cover cap AKM-...

# FESTO


Festo AG & Co. KG

Postfach  
D-73726 Esslingen  
++49/(0)711/347-0  
www.festo.com

### 1. Parts list

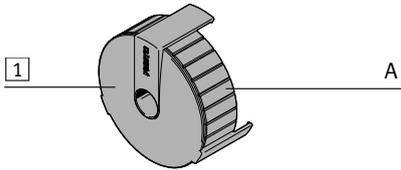

- 1 Cover cap  
AKM-...
- (A) Segment

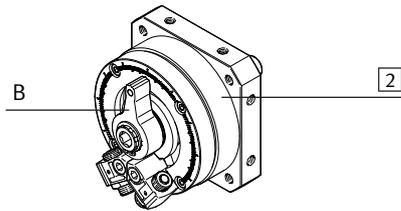

- Not included in scope of delivery:
- 2 Swivel module  
DS...-270-...-B

The cover cap AKM-... 1 is intended as protection against somebody placing his/her hand in the swivel range of the stop lever (B)

### Warning

Danger of injury due to uncontrolled movements:


- Exhaust the swivel module 2.

### 2. Preparing the assembly

With swivel modules 2 without stop system or with external cushioning, no segments (A) on the cover cap 1 must be broken (→Section 3).


With swivel modules 2 with stop system the following applies:

- Note the swivel angle set on your swivel module 2.
- Depending on the angle, different segments (A) in the positions of the stops must be broken out.

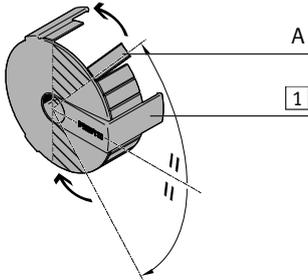


- If possible, break out the segment (A) symmetrical to the company logo.
- Do not break out too many segments (A). Cover cap 1 should be placed on swivel module 2 without touching the stops.

The following are examples of standard swivel modules.

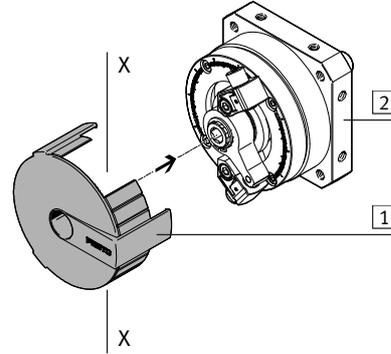

At 90°


- Break out the segments (A) here (→X).

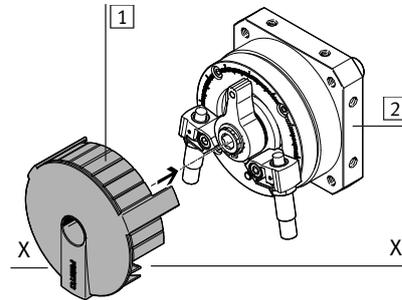

At 180°

- Break out the segments (A) here (→X).

### 3. Assembly

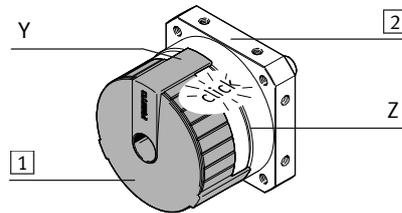

- In the case of swivel modules with stop system note the recesses.
- Press the cover cap 1 onto the swivel module 2 and let the 3 hooks (Y) snap into the groove (Z).