

FESTO

Festo AG & Co. KG

Postfach
73726 Esslingen
Deutschland
+49 711 347-0
www.festo.com

**Ventilinsel
MPA-C****1. Sicherheitshinweise und Hinweise zur Montage****⚠ Warnung**

Elektrische Spannung.

Verletzung (Tod) durch Stromschlag.

- Stromversorgung vor Montagearbeiten abschalten.

⚠ Vorsicht

Unerwartete Bewegung von Bauteilen.

Verletzung durch Schlag, Stoß, Quetschung.

- Druckluft vor Montagearbeiten abschalten.
- Stromversorgung vor Montagearbeiten abschalten.

→ Hinweis

Elektrostatische Aufladung.

Beschädigung der internen Elektronik.

- Montagepersonal vor Montagearbeiten elektrostatisch entladen.

→ Hinweis

Funktionsstörung und Sachschaden durch unsachgemäße Montage.

- Ausreichend Raum einplanen:
- Wärmeabfuhr durch Luftzirkulation ermöglichen
(→ mitgelieferte Dokumente: Technische Daten).
- Zugang der Anschlüsse ermöglichen.

Anforderungen an die Befestigungsfläche:

- verwindungsfreier Betrieb des Produkts
- Aufnahme des Gewichts und weiterer auftretender Kräfte.
- Montagebedingungen beachten (→ Abschnitt 2).

Die Einbaulage der Ventilinsel **1** ist beliebig.

- Ventilinsel **1** reinigungsfreundlich montieren.
Kontrolle:
- Verschmutzungen können abgespült werden
- Flüssigkeiten können gefahrlos ablaufen.

i InfoAbhängig vom Montageraum ist es eventuell sinnvoll, die Ventilinsel **1** vor der Montage zu verschlauchen (→ mitgelieferte Dokumente).**i Info****Mitgelieferte Dokumente**

→ Pneumatikbeschreibung Ventilinsel: MPA-C

2. Montagebedingungen

- Schwing-/Schockbelastung am Montageort nach IEC 60068 prüfen.

Schwingfestigkeit/Schockfestigkeit		nach IEC 60068			
Schwingung		Teil 2-6			
Schock		Teil 2-27			
Dauerschock		Teil 2-27			

- Ergebnis der Prüfung mit der Schwingfestigkeit der Ventilinsel vergleichen und den maximalen Schärfegrad (SG¹) ablesen.

Belastung Schwingung

Frequenzbereich [Hz]		Beschleunigung [m/s ²]		Auslenkung [mm]	
SG1	SG2	SG1	SG2	SG1	SG2
2 ... 8	2 ... 8	-	-	± 3,5	± 7
8 ... 27	8 ... 27	10	10	-	-
27 ... 58	27 ... 60	-	-	± 0,15	± 0,7
58 ... 160	60 ... 160	20	50	-	-
160 ... 200	160 ... 200	10	10	-	-

- Ergebnis der Prüfung mit der Schockfestigkeit der Ventilinsel vergleichen und den maximalen Schärfegrad (SG) ablesen.

Belastung Schock

Beschleunigung [m/s ²]		Dauer [ms]		Schocks je Richtung	
SG1	SG2	SG1	SG2	SG1	SG2
±150	±300	11	11	5	5

- Ergebnis der Prüfung mit der Dauerschockfestigkeit der Ventilinsel vergleichen. Liegt die Dauerschockbelastung am Montageort höher als die Dauerschockfestigkeit der Ventilinsel, darf die Ventilinsel nicht montiert werden.

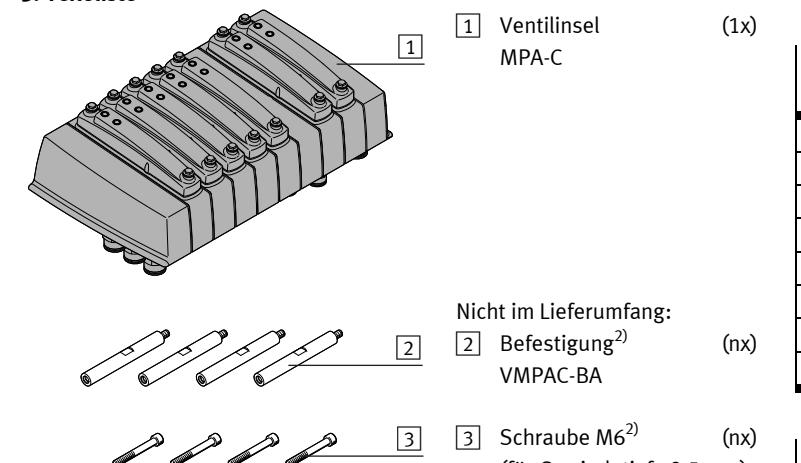
Belastung Dauerschock

Beschleunigung [m/s ²]		Dauer [ms]		Schocks je Richtung	
SG1	SG2	SG1	SG2	SG1	SG2
±150	6			1000	

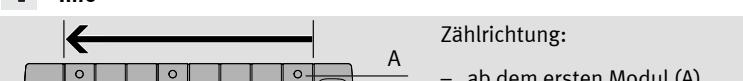
- Bei abweichenden Werten den Service von Festo kontaktieren.
- Ventilinsel dem maximalen Schärfegrad entsprechend montieren.

Zulässige Montage

Wand	Befestigung 2
Schwingung	SG2
Schock	SG2
Dauerschock	SG1

3. Teileliste**4. Bestimmungsgemäße Verwendung**

Produkt	Verwendung
Ventilinsel 1	Steuerung pneumatischer Aktuatoren unter Erfüllung der Schutzzart IP65/67/69K.
Befestigung 2	Montage der Ventilinsel 1 mit Abstand zur Befestigungsfläche.

5. Befestigungsarten**i Info**

- Positionen der Befestigungspunkte prüfen (→ Abschnitt 5a und 5b). Falls erforderlich korrigieren (→ mitgelieferte Dokumente).

5a. Grundbefestigung

- Bei Belastungen geringer als SG1 ist die Grundbefestigung ausreichend.

Anzahl Module	Befestigung am Modul					
1	Befestigung am Modul.					

5b. Zwischenbefestigung**Bei Wandmontage und SG1**

Anzahl Module	Befestigung an den Modulen					
	11 21 31					
1 ... 11	-					
12 ... 21	•					
22 ... 31	•		•			
32 ... 40	•		•			•

Bei Wandmontage und SG2

Anzahl Module	Befestigung an den Modulen					
	6 11 16 21 26 31 36					
1 ... 10	-					
11	•					
12 ... 16	•	•				
17 ... 21	•	•	•			
22 ... 26	•	•	•	•		
27 ... 31	•	•	•	•	•	
32 ... 36	•	•	•	•	•	•
37 ... 40	•	•	•	•	•	•

Bei Montage mit Befestigungen **2 und SG1**

Anzahl Module	Befestigung an den Modulen					
	6 11 16 21 26 31 36					
1 ... 10	-	</				

FESTO

Festo AG & Co. KG

Postfach
73726 Esslingen
Germany
+49 711 347-0
www.festo.com

**Valve terminal
MPA-C****1. Safety instructions and notes on mounting****Warning**

Electric voltage.

Injury (death) due to electric shock.

- Switch off power supply before assembly work.

Caution

Unexpected movement of components.

Injury due to electric shock, impact, squeezing.

- Switch off compressed air before assembly work.
- Switch off power supply before assembly work.

Note

Electrostatic charge.

Damage to the internal electronics.

- Electrostatically discharge assembly personnel prior to assembly work.

Note

Malfunction and material damage due to incorrect mounting.

- Plan sufficient space:
- Permit heat dissipation through air circulation
(→ applicable documents: Technical data).
- Permit access to the connections.

Requirements for the mounting surface:

- torsion-free operation of the product
- acceptance of the weight and other forces that occur.
- Observe mounting conditions (→ section 2).

The valve terminal [1] can be mounted in any position.

- Mount valve terminal [1] so it is easy to clean.
Check:
- Contamination can be flushed away
- Fluids can run off safely.

Information

Dependent on the mounting space, it might make sense to attach tubing to the valve terminal [1] before mounting (→ applicable documents).

Information**Applicable documents**

→ Description of pneumatics for the valve terminal: MPA-C

2. Mounting conditions

- Check vibration/shock load at the mounting location in accordance with IEC 60068.

Resistance to vibration/resistance to shocks		in accordance with IEC 60068	
Vibration		Part 2-6	
Shock		Part 2-27	
Continuous shock		Part 2-27	

- Compare the result of the test to the vibration resistance of the valve terminal and read the maximum severity level (SL¹).

Vibration load

Frequency range	[Hz]	Acceleration	[m/s ²]	Displacement	[mm]
SL1	SL2	SL1	SL2	SL1	SL2
2 ... 8	2 ... 8	–	–	± 3.5	± 7
8 ... 27	8 ... 27	10	10	–	–
27 ... 58	27 ... 60	–	–	± 0.15	± 0.7
58 ... 160	60 ... 160	20	50	–	–
160 ... 200	160 ... 200	10	10	–	–

- Compare the result of the test to the resistance to shocks of the valve terminal and read the maximum severity level (SL).

Shock load

Acceleration		Duration		Shocks per direction	
SL1	SL2	SL1	SL2	SL1	SL2
±150	±300	11	11	5	5

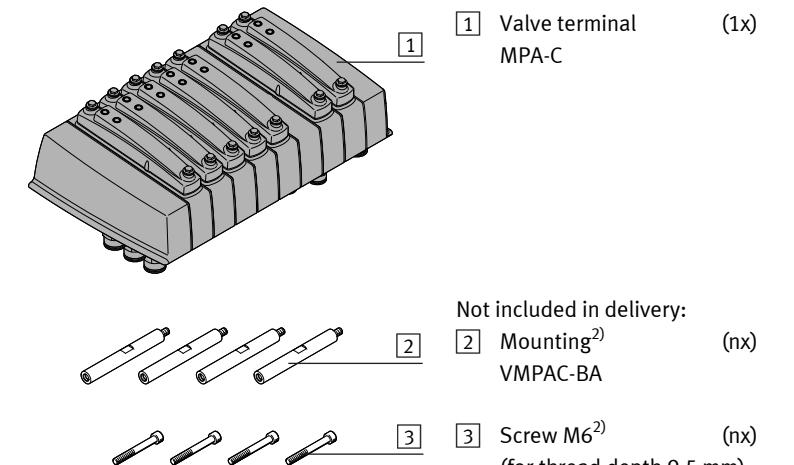
- Compare the result of the test to the continuous shock resistance of the valve terminal. If the continuous shock load at the mounting location is higher than the continuous shock resistance of the valve terminal, the valve terminal must not be mounted.

Continuous shock load

Acceleration	[m/s ²]	Duration	[ms]	Shocks per direction
±150		6		1000

- In case of deviating values, contact Festo Service.
- Mount valve terminal to conform to the maximum severity level.

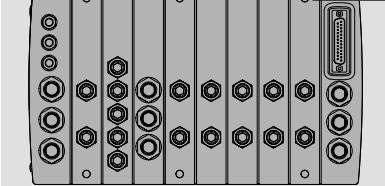
Permissible mounting	Wall	Mounting [2]
Vibration	SL2	SL2
Shock	SL2	SL2
Continuous shock	SL1	SL1

3. Parts list**4. Intended use**

Product	Usage
Valve terminal [1]	Control of pneumatic actuators while fulfilling the degree of protection IP65/67/69K.
Mounting [2]	Mounting of the valve terminal [1] with distance from the mounting surface.

5. Types of mounting**i Information**

Counting direction:
– from the first module (A)



- Check positions of the mounting points (→ section 5a and 5b). Correct, if required (→ applicable documents).

5a. Basic mounting

- For loads less than SL1, the basic mounting is sufficient.

Number of modules	Mounting to the module.
1	Mounting to the module.
2 ... 40	Mounting to the first and last module.

5b. Intermediate mounting**For wall mounting and SL1**

Number of modules	Mounting to the modules
11	21 31
1 ... 11	–
12 ... 21	•
22 ... 31	• •
32 ... 40	• • •

For wall mounting and SL2

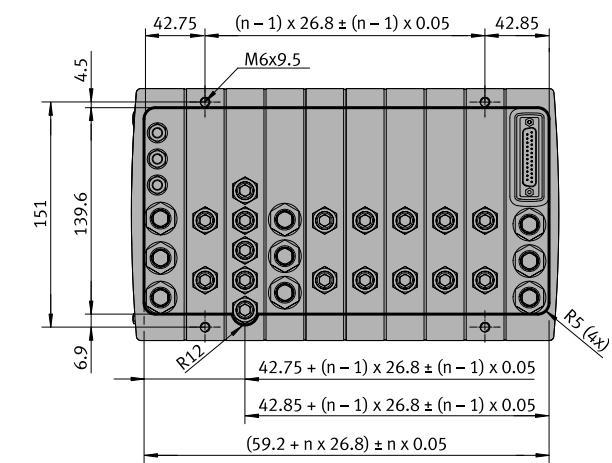
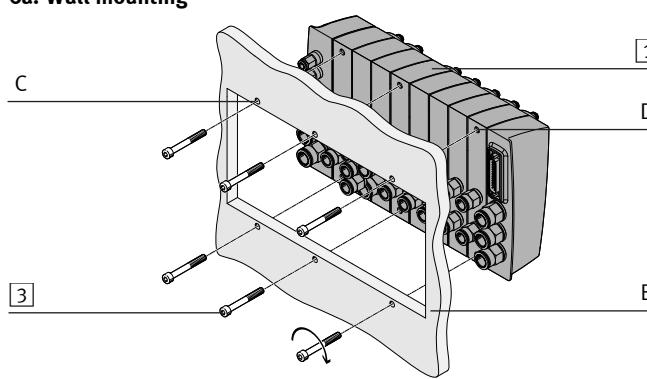
Number of modules	Mounting to the modules
6	11 16 21 26 31 36
1 ... 10	–
11	•
12 ... 16	• •
17 ... 21	• • •
22 ... 26	• • • •
27 ... 31	• • • • •
32 ... 36	• • • • • •
37 ... 40	• • • • • • •

For mounting with mountings [2] and SL1

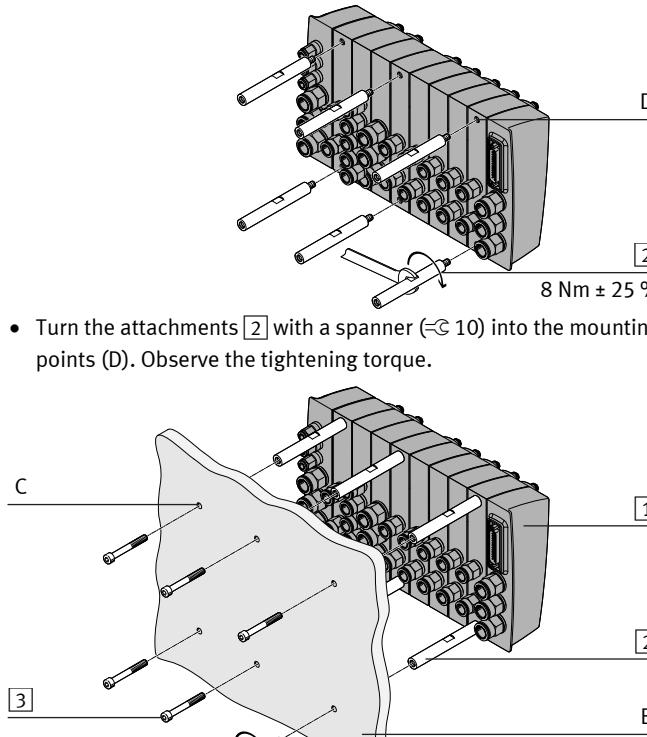
Number of modules	Mounting to the modules
6	11 16 21 26 31 36
1 ... 10	–
11	•
12 ... 16	• •
17 ... 21	• • •
22 ... 26	• • • •
27 ... 31	• • • • •
32 ... 36	• • • • • •
37 ... 40	• • • • • • •

For mounting with attachments [2] and SL2

Number of modules	Mounting to the modules
6	11 16 21 26 31 36
1 ... 6	–
7 ... 11	•
12 ... 16	• •
17 ... 21	• • •
22 ... 26	• • • •
27 ... 31	• • • • •
32 ... 36	• • • • • •
37 ... 40	• • • • • • •

6. Mounting**6a. Wall mounting**

- Make cut-out on the mounting surface (B) for the connections (→ dimension drawing).
- Drill mounting holes (C) (→ dimension drawing).
- Select screws [3] suitable for the installation situation.
- Fasten valve terminal [1] with screws [3].

6b. Mounting with attachments

- Drill mounting holes (C) (→ dimension drawing).
- Select screws [3] suitable for the installation situation.
- Place