

**FESTO**

Festo AG & Co. KG

Rüter Straße  
 73734 Esslingen  
 Germany  
 +49 711 347-0  
 www.festo.com

**Solenoid valve  
 VSNC-F-...-...14-F...**

**1. Further applicable documents**

All available documents for the product → [www.festo.com/pk](http://www.festo.com/pk)

→ Operating instructions of the drive

Accessories for VSNC → [www.festo.com/catalogue](http://www.festo.com/catalogue)


**2. Safety**

- Switch off power supply before mounting work.
- Switch off compressed air before mounting work.
- Observe the safety instructions (→ Applicable documents).

**3. Intended use**

Solenoid valves VSNC-F-...-...14-F8 and VSNC-F-...-...14-FN:  
 Attachment to a drive with port pattern as per NAMUR in accordance  
 with VDI/VDE 3845 sheet 1:2010-09.

**4. Scope of delivery**

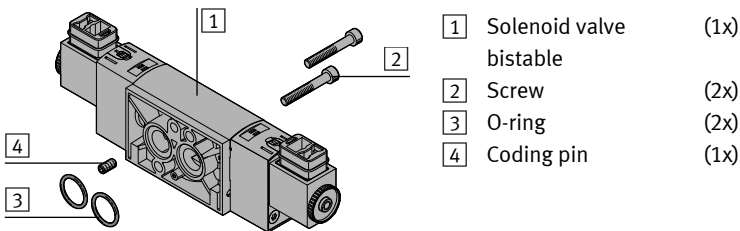

**5. Installation**

→ **Note**

Malfunction due to incorrect mounting.

- Set manual override (A) to **unactuated** prior to assembly.



→ **Note**


Malfunction during outdoor application.

The exhaust ducts 3/5 are plugged, e.g. through frozen condensed water or nesting insects.

- Take on-site environmental conditions into account.
- Perform appropriate safeguarding.  
 For example:
  - Use exhaust protection VABD-D3-SN-G14.
  - Catch exhaust air.

**i Information**

The alignment of the solenoid valve [1] depends on the position of the coding pin [4]. The position of the coding pin [4] determines the direction of movement on the drive.

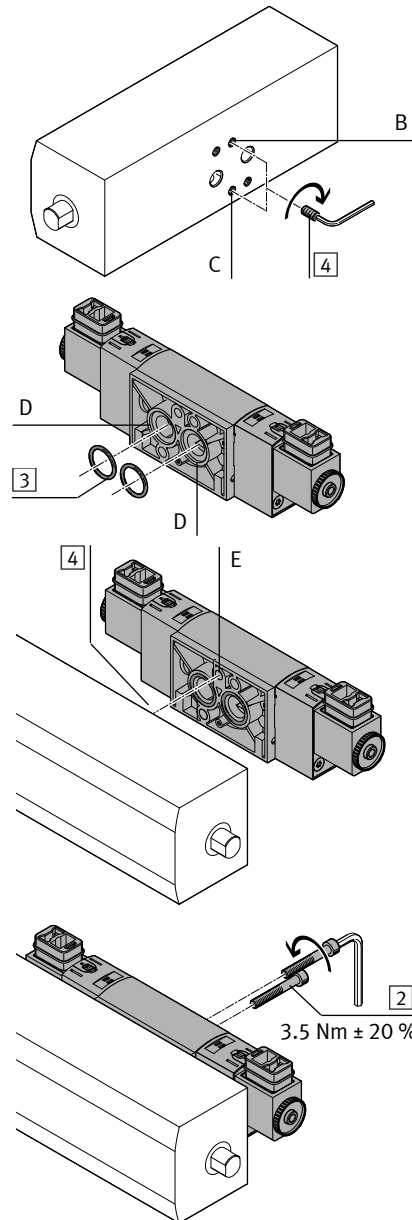

- Position coding pin [4] on the thread (B)/(C) in accordance with the desired direction of movement.
- Screw coding pin [4] into the thread (B)/(C) up to the stop.
- Press O-rings [3] into the depressions (D).
- Place coding recess (E) on the coding pin [4].
- Tighten screws [2]. Observe tightening torque.

**6. Circuit diagrams**

VSNC-F-...-...14-F...

