

Abdeckkappe VUVS-LK20/25

FESTO


Festo AG & Co. KG


Postfach
73726 Esslingen
Deutschland
+49 711 347-0
www.festo.com

1. Teileliste

 **1** Abdeckkappe (10x)

Nicht im Lieferumfang:

 **2** Magnetventil
VUVS-LK20...
VUVS-LK25...

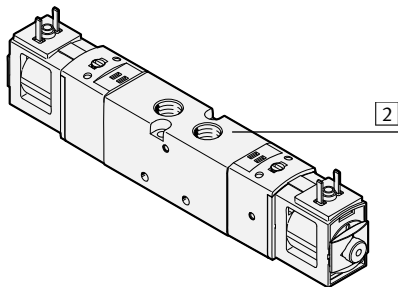

2. Bestimmungsgemäße Verwendung

Abdeckkappe VUVS-LK20/25:

Manuelle tastende Betätigung des Magnetventils **2** (→ Abschnitt 4a).

Sperrung der manuellen Betätigung des Magnetventils **2** (→ Abschnitt 4b).

3. Hinweise zur Montage

→ Hinweis

Funktionsstörung durch unsachgemäße Montage.


- Druckluft vor Montagearbeiten abschalten.

- Handhilfsbetätigung (A) vor der Montage auf **unbetätigt** stellen.




4. Montage

4a. Montage für tastende Betätigung

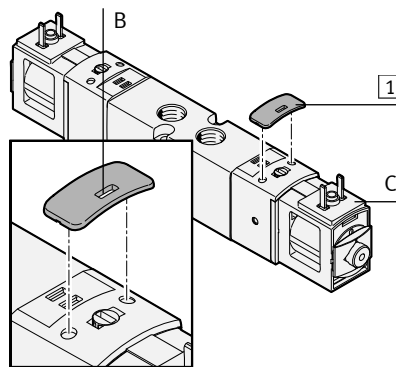

- Abdeckkappe **1** wie dargestellt montieren (→ **Hinweis**).
Kontrolle: Öffnung (B) ist dem Magneten (C) zugewandt.

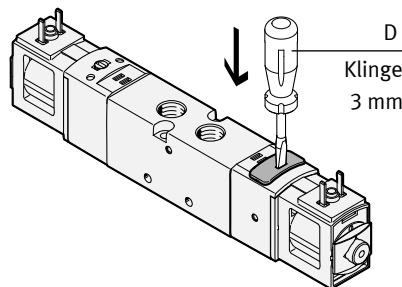


- Schraubendreher (D) zur Betätigung in Pfeilrichtung bewegen.

4b. Montage als Sperrfunktion


i Info

Die Abdeckkappe **1**, um 180° gedreht montiert, verhindert die Betätigung.

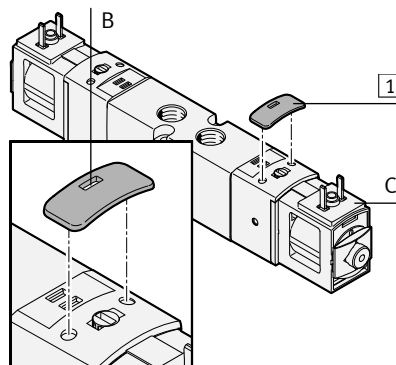

- Abdeckkappe **1** wie dargestellt montieren (→ **Hinweis**).
Kontrolle: Öffnung (B) ist dem Magneten (C) abgewandt.

5. Demontage

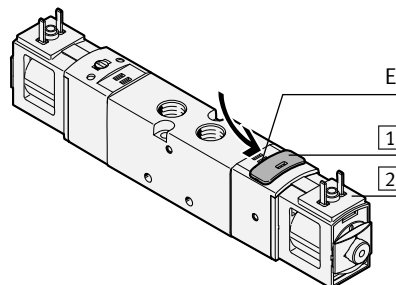

- Abdeckkappe **1** mittels Öffnung (E) vom Magnetventil **2** entfernen.


FESTO

Festo AG & Co. KG


Postfach
73726 Esslingen
Germany
+49 711 347-0
www.festo.com


**Cover cap
VUVS-LK20/25**

1. Parts list

 1 Cover cap (10x)



Not included in delivery:

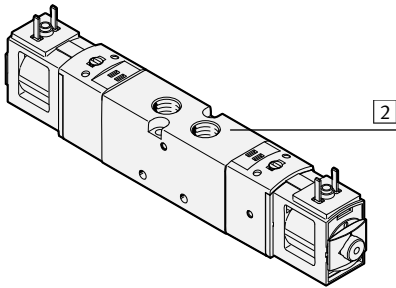 2 Solenoid valve (1x)
VUVS-LK20...
VUVS-LK25...



2. Intended use

Cover cap VUVS-LK20/25:

- Manual non-detenting actuation of the solenoid valve  (→ section 4a).
- Blocking the manual actuation of the solenoid valve  (→ section 4b).

3. Notes on mounting

→ Note


Malfunction due to incorrect mounting.


- Switch off compressed air before mounting work.
- Set manual override (A) to **unactuated** prior to mounting.




4. Mounting

4a. Mounting for non-detenting actuation

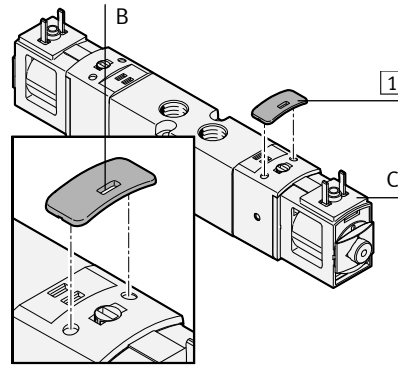


- Mount cover cap  as shown (→ **Note**).
Check: Orifice (B) is located on the side facing the magnet (C).

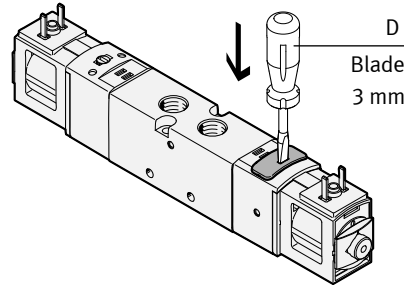



- To actuate, move screwdriver (D) in the direction of the arrow.

4b. Mounting as a blocking function

 
i Information



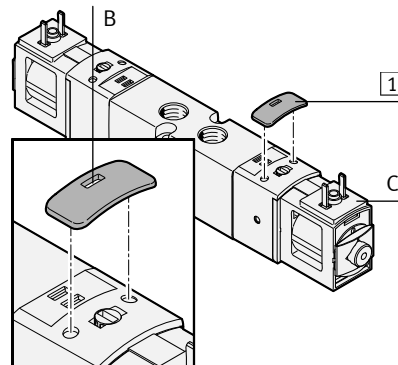When mounted and rotated by 180°, the cover cap  prevents actuation.



- Mount cover cap  as shown (→ **Note**).
Check: Orifice (B) is located on the opposite side to the magnet (C).

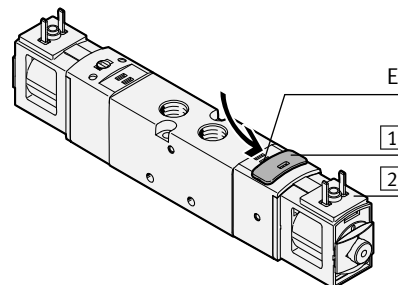5. Dismantling



- Remove cover cap  from the solenoid valve  using orifice (E).