EA Series Air Preparation Unit– Accessories

◎ How to Order?

Square pressure gauge

Series No.	Pressure Range	Scale Unit
EAC2000-FB: EA2000 series special square pressure gauges EAC-FB: EA3000/ EA4000series special square pressure gauges	010: 0~1.0 Mpa 0~10 Bar 0~150 Psi	1 : MPa 2 : Bar 3 : Psi

Order Example:

EA 3000 series special square pressure gauge, pressure range: 0~1.0Mpa, scale:MPa, the ERP code is EAC-FB0101

Round pressure gauge

Series No.	Dial Diameter	Pressure Range	Scale Unit	Case Material	Case Molor	Fitting Material	Port Size
EAC-EYZ: EA series special round pressure gauges	26 : 26.5mm (Used in the EA2000 series) 40 : 40mm (Used in the EA3000 /4000series)	010:0~1.0MPa/0~150Psi 0~10Bar/0~150Psi	4:MPa/Psi 5:Bar/Psi	1: The plastic shell(26) 2: The iron shell(40)	B:Black	Blank:Brass	M6:M6

Order Example:

EA series special round pressure gauge, diameter is 40mm, pressure range:0-1.0Mpa/0-150psi, scale is Mpa/Psi, black metal shell, brass fitting, port size is M6, the ERP code is EAC-EYZ4001041B-M6

Cross Spacer

Series No.	Type No. —	Port Size —	Thread Type
EA200:EA2000 series spacer EA300:EA3000 series spacer EA400:EA4000 series spacer	1: 1000 series ① 2: 2000 series 3: 3000 series 4: 4000 series	2000 01: 1/8" 02: 1/4" 3000 02: 1/4" 03: 3/8" 04: 1/2" 4000 03: 3/8" 04: 1/2" 06: 3/4"	Blank: G P: PT T: NPT

Order Example:

EA 3000 series cross spacer, 2 way,port size of 1/4", G thread, the ERP code is: EA3002-02

Note：①It means cross spacer prot qty,not including inlet/outlet port;
If use cross spacer together with EAC series F.R.L or FR.L should mount together with T type bracket.
②Refer to the order code of T type bracket for details

◎ Product Features

· Mount between filter regulator/regulator and lubricator of EA series, to branch air supply line;
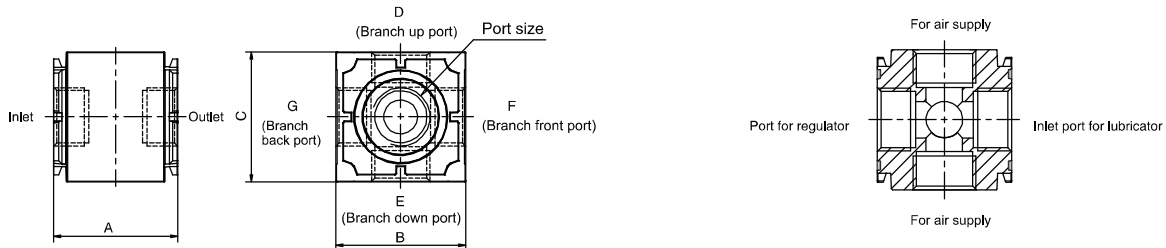· Could be used with T type bracket or used seperatedly

◎ Specifications

Model	EA200□	EA300□	EA400□
Working Medium	Clean Air(after 40 μ m filtration)		
Guaranteed Pressure(MPa)	1.5		
Max. Working Pressure(MPa)	1.0		
Weight(g)	70	180	350

Accessories 4

◎ **Internal Structure**

Inlet — Outlet C
A
G (Branch back port)
D (Branch up port)
Port size
F (Branch front port)
E (Branch down port)
B

For air supply
Port for regulator
Inlet port for lubricator
For air supply

◎ **Dimensions and Ports**

Model	Port size	A	B	C
EA200	1/8", 1/4"	34	34	34
EA300	1/4",3/8",1/2"	44	46	46
EA400	3/8",1/2",3/4"	56	58	58

Model			D	E	F	G
EA2001	EA3001	EA4001	Through hole	Blind hole	Blind hole	Blind hole
EA2002	EA3002	EA4002	Through hole	Through hole	Blind hole	Blind hole
EA2003	EA3003	EA4003	Through hole	Through hole	Through hole	Blind hole
EA2004	EA3004	EA4004	Through hole	Through hole	Through hole	Through hole

◎ **Mounting Accessories**

Model	Code	Dimensions	Applicable product specifications	
T–type spacer with bracket	EAC20T-P01		EAC2000	EAC2010
	EAC30T-P01		EAC3000	EAC3010
	EAC40T-P01		EAC4000	EAC4010
20-type bracket	EAC220-P01		EAW2000	EAR2000
	EAC320-P01		EAW3000	EAR3000
	EAC420-P01		EAW4000	EAR4000
40-type bracket	EAC240-P01		EAF2000	EAL2000
	EAC340-P01		EAF3000	EAL3000
	EAC440-P01		EAF4000	EAL4000

◎ **Accessories Application Example**

Cross spacer
T–type spacer with bracket
20 bracket
40 bracket

4

Accessories