


Bezeichnungsträger ASLR-D-L1

FESTO

Festo AG & Co. KG

Postfach
73726 Esslingen
Deutschland
+49 711 347-0
www.festo.com

1. Teileliste

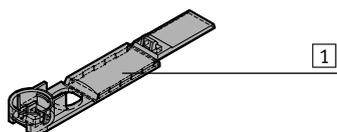

1 Bezeichnungsträger (1x)
ASLR-D-L1

2. Bestimmungsgemäße Verwendung

Bezeichnungsträger ASLR-D-L1:
Beschilderung der Ventile VUVG (A). Abdeckung der Handhilfsbetätigung (B).

3. Hinweise zur Montage

- Beschriftungsalternativen wählen:
Alternative 1: Beschriftung des Bezeichnungsschildes (C).
Alternative 2: Direkt auf dem Bezeichnungsträger mit geeignetem Stift.



Info


Mitgeltende Dokumente

Support Portal VORLAGE → www.festo.com/sp




4. Beschriftung des Bezeichnungsschildes (C)

- Bezeichnungsschild (C) in der korrekten Schildergröße mit Hilfe der Vorlage beschriften (→ Mitgeltende Dokumente).
- Bezeichnungsschild (C) drucken und ausschneiden.

5. Montage

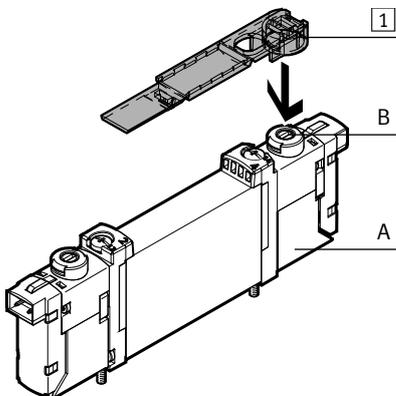

- Handhilfsbetätigung (B) auf nicht betätigt / eingerastet stellen.
- Bezeichnungsträger 1 lagerichtig auf die Handhilfsbetätigung (B) stecken.

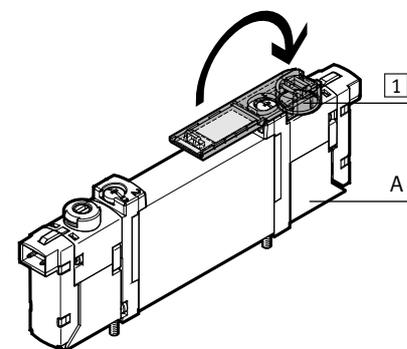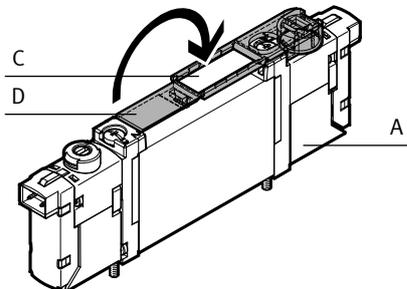
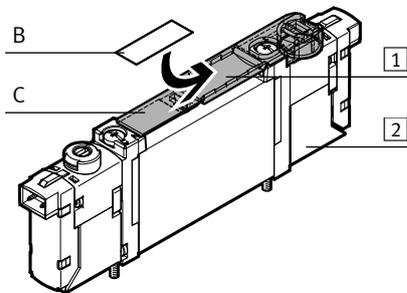


6. Handhilfsbetätigung



Info

Nach dem Aufstecken des Bezeichnungsträgers 1 ist die Betätigung der Handhilfsbetätigung (A) nur noch tastend möglich.

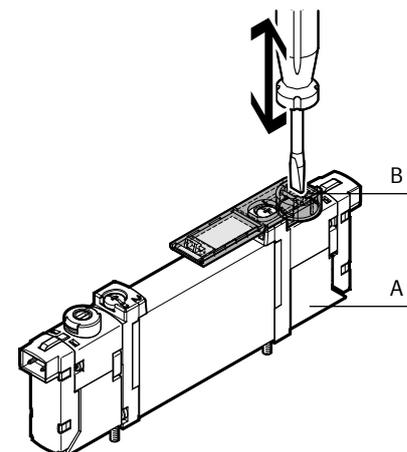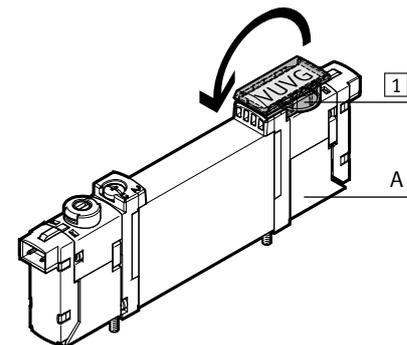

Alternative 1:

- Bezeichnungsschild (C) mit der Schrift nach unten in den Bezeichnungsträger 1 legen.

Alternative 2:

- Hinteren Bereich (D) des Bezeichnungsträgers 1 mit geeignetem Stift beschriften.
- Hinteren Bereich (D) umklappen.
- Bezeichnungsschild (C) ist gesichert

- Bezeichnungsträger 1 zu-klappen.

- Bezeichnungsträger 1 auf-klappen.

- Handhilfsbetätigung (B) mit einem Schraubendreher betätigen.


FESTO

Festo AG & Co. KG

Postfach
73726 Esslingen
Germany
+49 711 347-0
www.festo.com

Inscription label holder ASLR-D-L1

1. Parts list

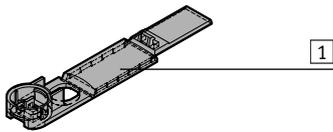

1 Inscription label holder ASLR-D-L1 (1x)

2. Intended use

Inscription label holder ASLR-D-L1:
Labelling of the valves VUVG (A). Cover for the manual override (B).

3. Notes on mounting

- Select the inscription alternatives:
Alternative 1: Inscription of the inscription label (C).
Alternative 2: Directly on the inscription label holder with a suitable pen.

i Information


Applicable documents

Support Portal TEMPLATE → www.festo.com/sp


4. Labelling of the inscription label (C)

- Inscribe the inscription label (C) using the correct label size with the help of the template (→ Applicable documents).
- Press and cut out the inscription label (C).

5. Mounting

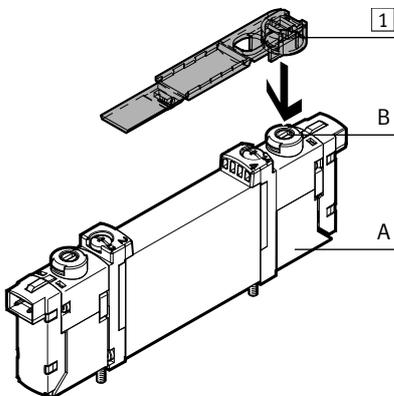

- Set the manual override (B) to not actuated / not engaged.
- Place the inscription label holder 1 directly on the manual override (B) in the correct position.


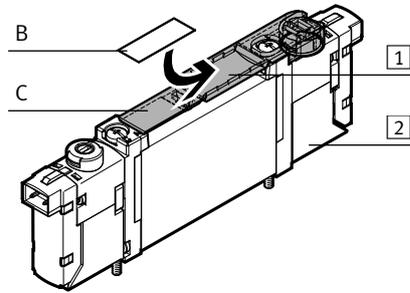


Alternative 1:

- Place the inscription label (C) into the inscription label holder 1 with the writing facing downwards.

Alternative 2:

- Inscribe the rear area (D) of the inscription label holder 1 with a suitable pen.
- Fold down the rear area (D).
→ The inscription label (C) is secured

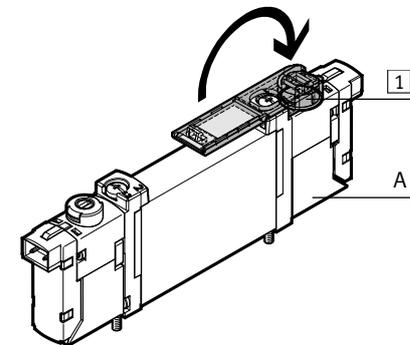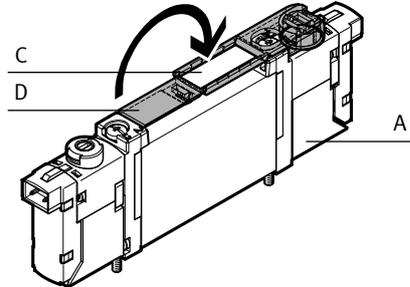


- Fold the inscription label holder 1 shut.


6. Manual override

i Information

After the inscription label holder 1 has been put on, the manual override (A) can only be actuated without the detent mechanism engaged.

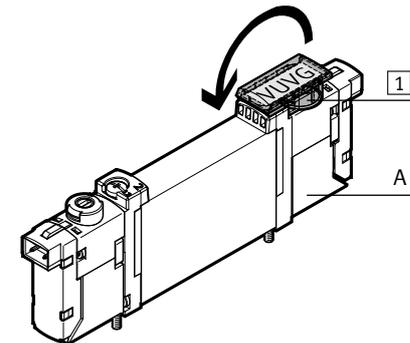

- Fold the inscription label holder 1 open.

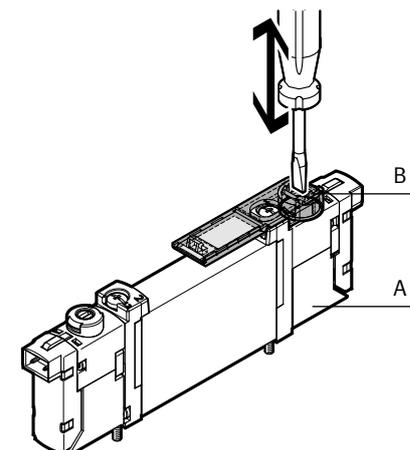

- Actuate the manual override (B) with a screwdriver.